

METRO PLATFORM BED

8-04

Step 1:

Install two feet, one side rail, both end rails, and the center support rail (if supplied) as shown.

Step 2:

Install slats through center support rail (if supplied) and into pockets on side rail, making sure that the two slats with a hole in each end go into the third pocket from each end to align with holes in side rail. Secure with two wood screws as shown.


Step 3:

Install one foot and second side rail, leaving machine bolts loose about two turns. Carefully insert ends of slats into pockets on side rail and secure with two wood screws as shown. Install the last foot, tighten all screws when done and turn bed right side up.

After about 60 days, check all screws and bolts for tightness and tighten as necessary. Check all screws and bolts for tightness yearly after that.

Parts List

- | | |
|---|---|
| 8 | barrel nuts |
| 8 | machine screws |
| 4 | short wood screws |
| 2 | long wood screws (Full, Queen, and King beds only) |
| 1 | allen wrench |

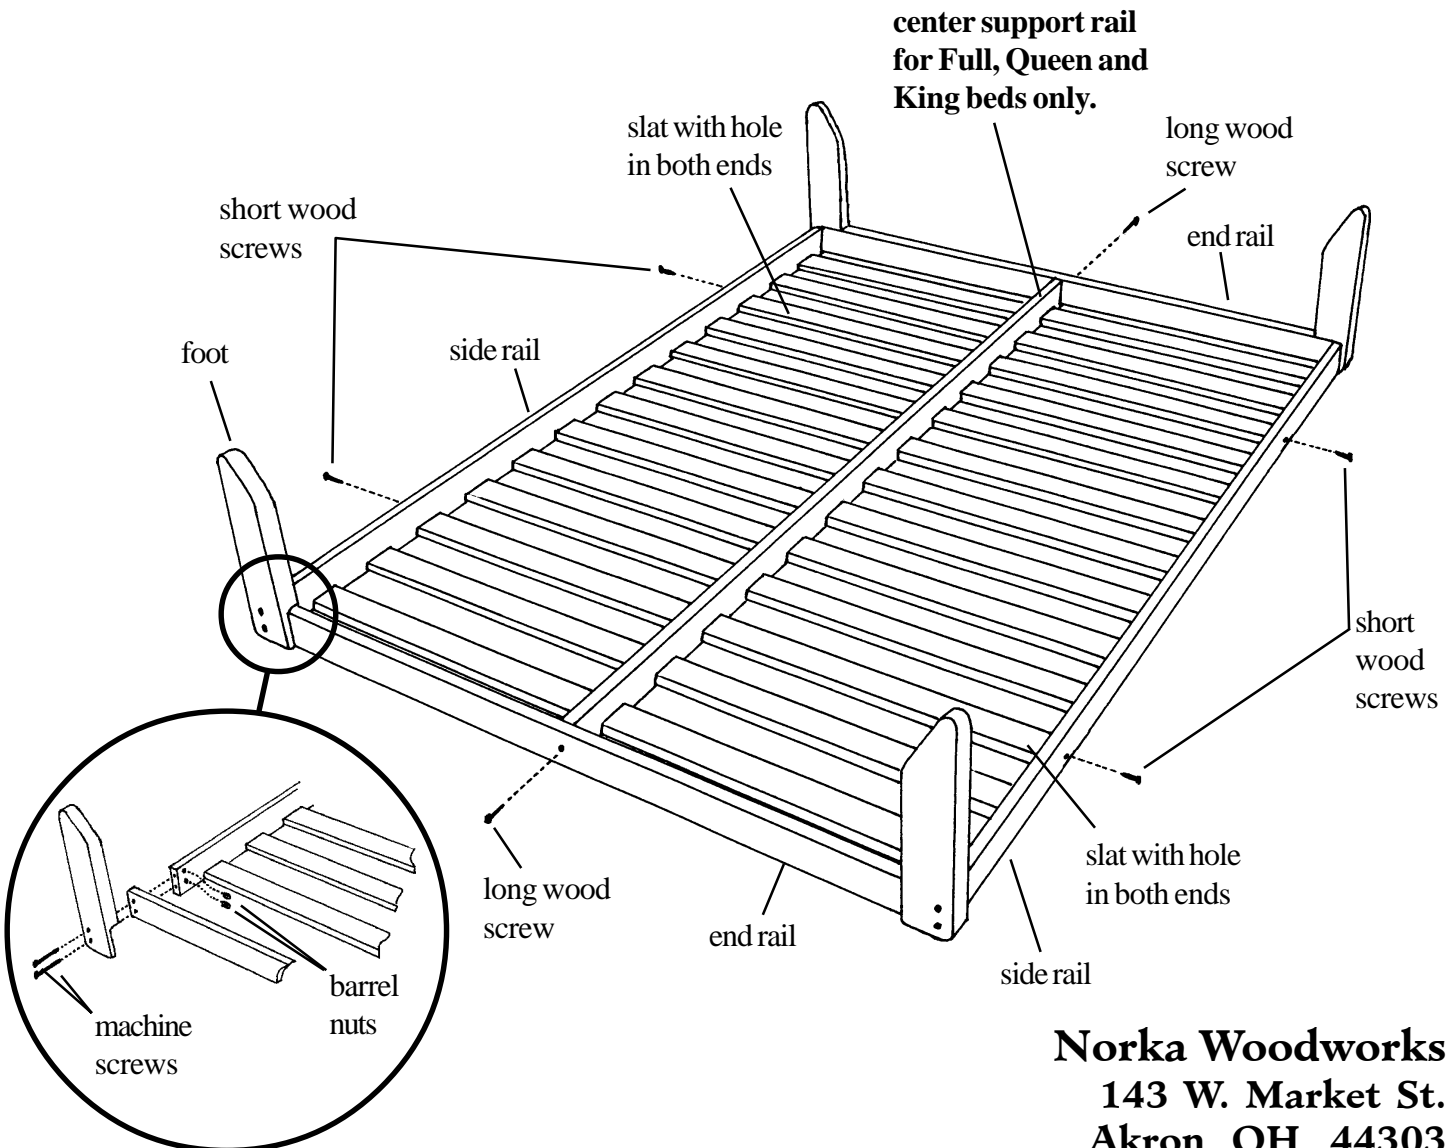

Norka Woodworks
143 W. Market St.
Akron, OH 44303
© 2001, 2002 Norka, Inc.