

PLATFORM BED

8-04

Step 1:

Assemble headboard as shown for your particular bed style. Tighten wood screws tightly and tap wood plugs over the screw heads with a rubber mallet or hammer padded with newspaper. If desired, the wood plugs may be glued into place with any brand wood glue.

Step 2:

Inset one end rail into the inserts of the headboard, making sure that the routed pocket is facing inward and is toward the bottom of the bed. Attach one right pocketed side rail (pockets toward the top of the bed) to the headboard assembly using 2 70 mm machine screws and 2 barrel nuts. Attach the center support rail (if supplied) to the headboard end rail with a 50 mm wood screw. Attach the right foot to the other end of the pocketed side rail through the end rail as shown and secure the other end of the center support rail (if supplied) with a 50 mm wood screw. Make the frame level by propping up the other end of the end rail with the left foot (it may be secured temporarily by sliding a machine screw through either hole).



Step 3:

Insert all slats into the pockets of the right pocketed side rail. The fourth slat from the head and the fourth slat from the foot should have a hole drilled in each end. Secure these slats with 40 mm wood screws. Align the pockets of the left pocketed side rail with the slats and secure the fourth slat from the head and foot with 40 mm wood screws like you did on the first side. Attach the left pocketed side rail to the headboard assembly and the left foot using two 70 mm machine screws and barrel nuts on each end as in **Step 1**.

After about 60 days, check all 8 70 mm machine screws for tightness and tighten as necessary. Check for tightness yearly after that.

Hardware Guide

Please check the parts list for your particular bed style for the number of each part required for assembly.

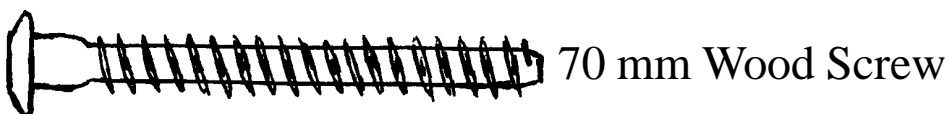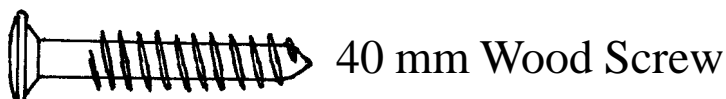


Norka Woodworks
143 W. Market St.
Akron, OH 44303
© 2003 Norka, Inc.

Step 1:

Bedford Platform Bed

Bedford Parts List

- 8 barrel nuts
- 8 70 mm machine screws
- 4 40 mm wood screws
- 2 50 mm finish screws (**Full, Queen, and King beds only**)
- 8 70 mm wood screws
- 8 Wood plugs
- 1 allen wrench

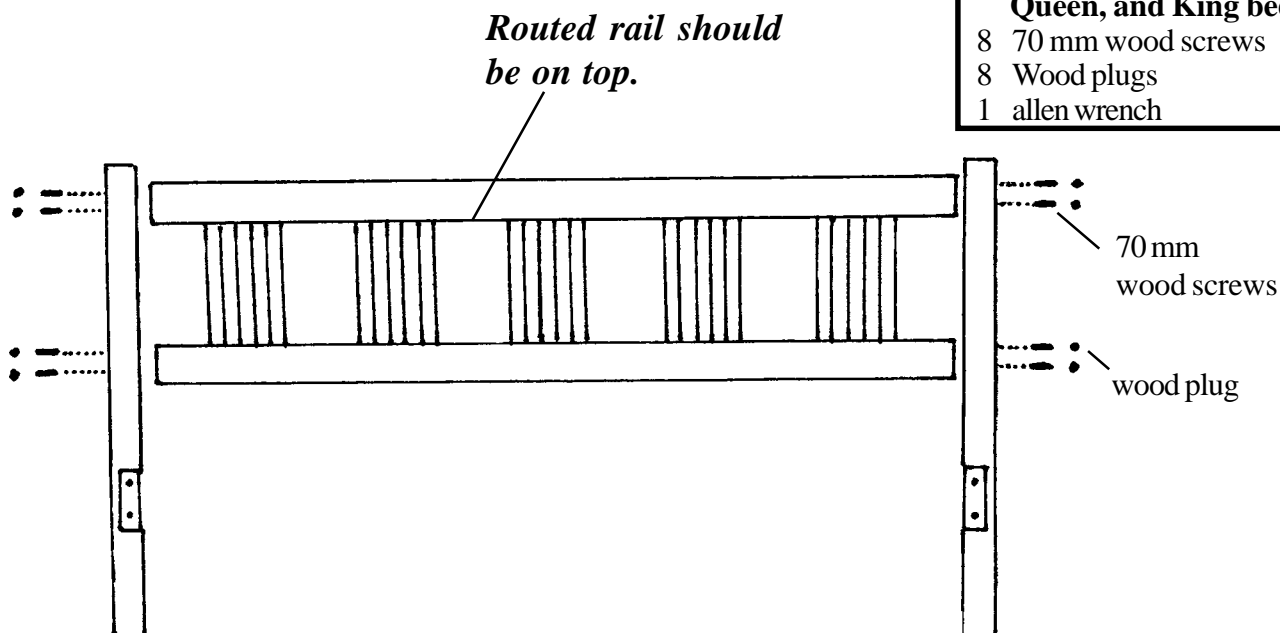


Step 1:

Lexington Platform Bed

Lexington Parts List


- 8 barrel nuts
- 8 70 mm machine screws
- 4 40 mm wood screws
- 4 50 mm wood screws
- 8 70 mm wood screws
- 2 50 mm finish screws (**Full, Queen, and King beds only**)
- 4 Small wood plugs
- 8 Large wood plugs
- 1 allen wrench

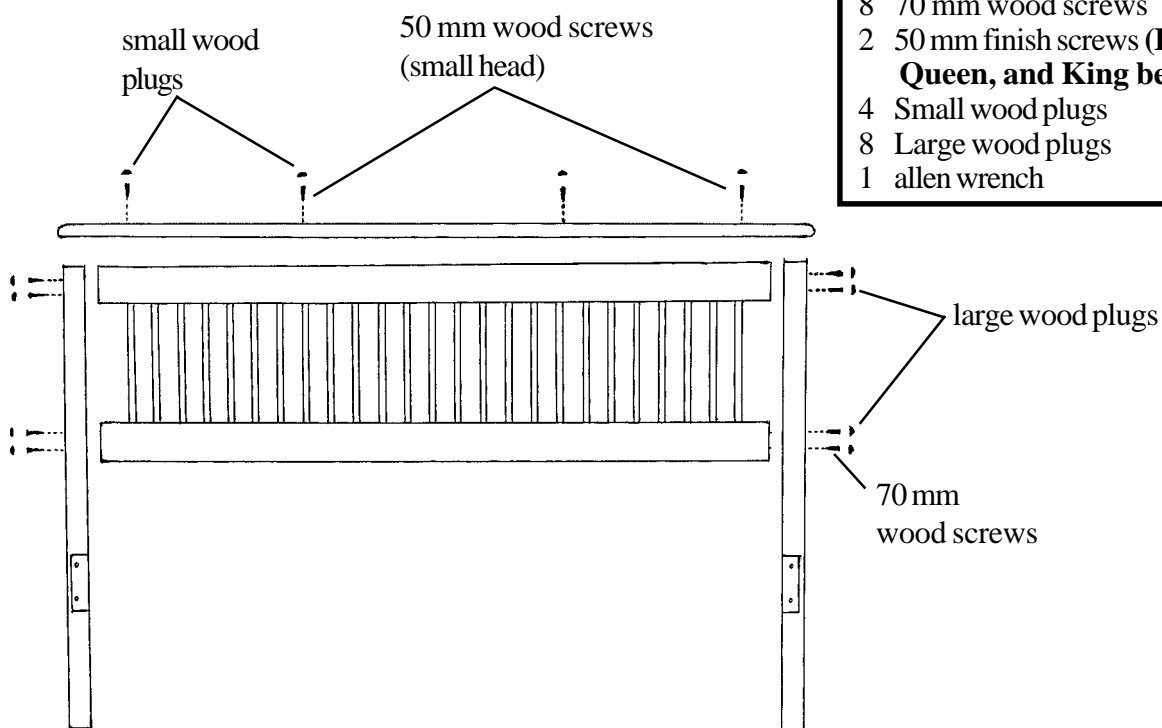

Step 1a: Bristol Platform Bed


Bristol Parts List

- 8 barrel nuts
- 8 70 mm machine screws
- 4 40 mm wood screws
- 4 50 mm wood screws
- 8 70 mm wood screws
- 2 50 mm finish screws (**Full, Queen, and King beds only**)
- 4 Small wood plugs
- 4 Large wood plugs
- 1 allen wrench

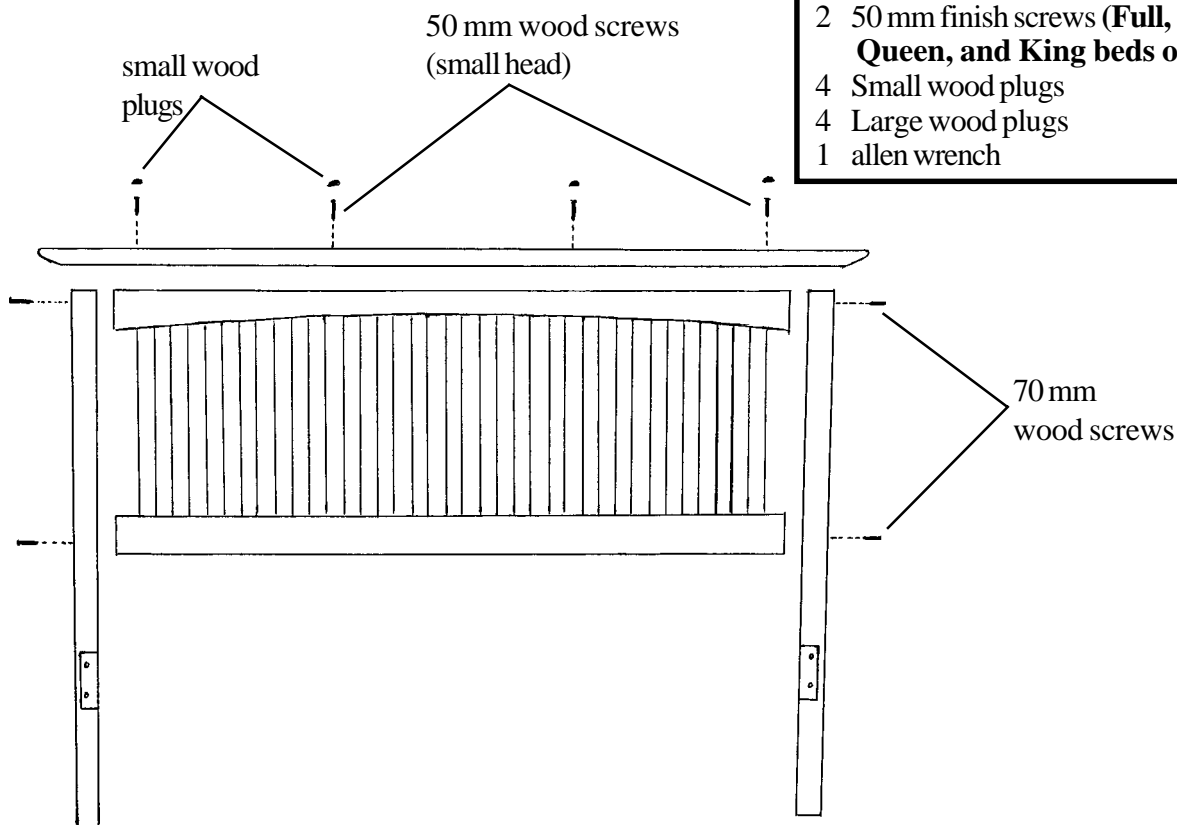


Step 1b: Bristol Platform Bed

Gussets are intentionally loose fitting. Adjust to minimize gap on top and tighten.

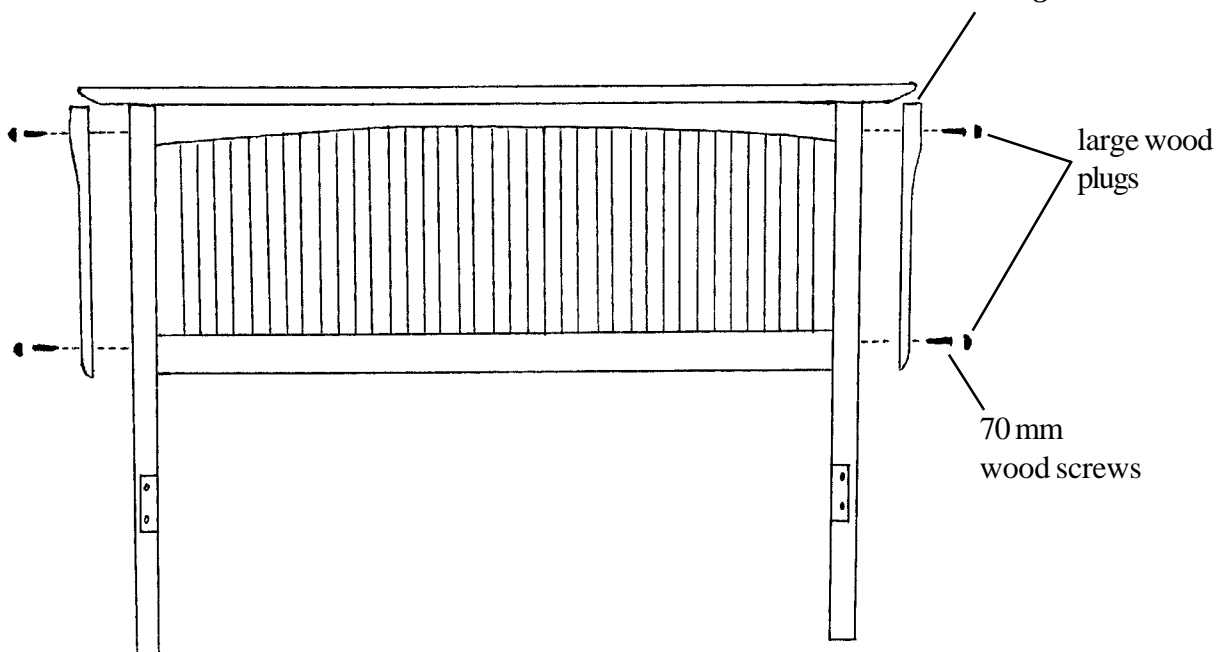

Step 2

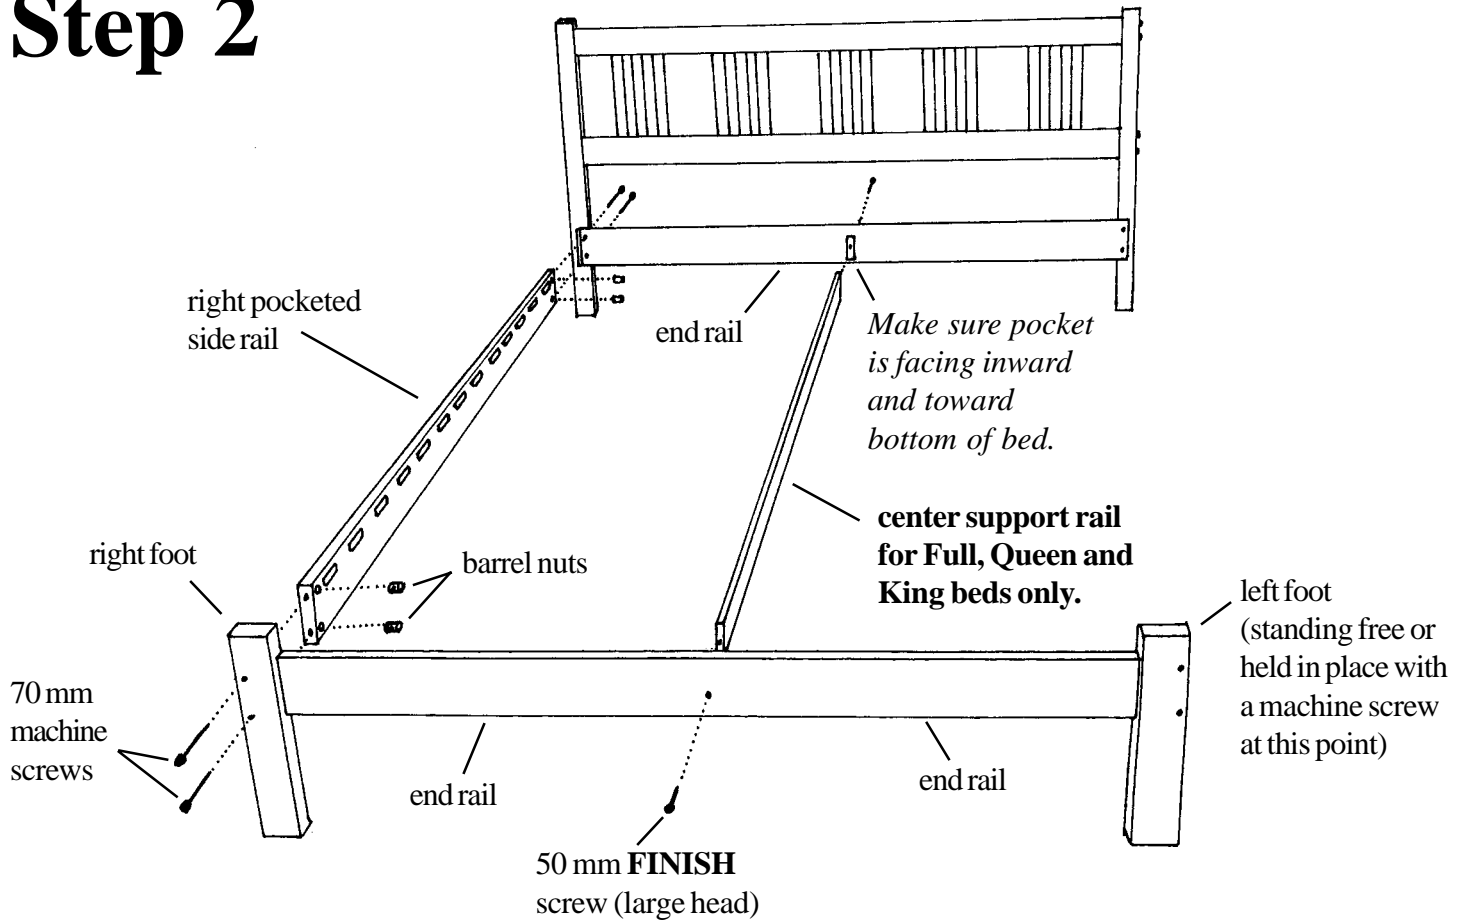

Step 3

