

TRADITIONAL PLATFORM BED

9-06

Step 1:


Insert one end rail into the inserts of the two corner posts, making sure that the routed center rail pocket is facing inward and is toward the bottom of the bed. Attach one pocketed side rail (pockets toward the top of the bed) to the end rail assembly using 2, 70 mm machine screws and 2 barrel nuts. Attach the center support rail (if supplied) to the end rail with a 50 mm wood screw. Attach the right foot to the other end of the pocketed side rail through the end rail as shown and secure the other end of the center support rail (if supplied) with a 50 mm wood screw. Make the frame level by propping up the other end of the end rail with the left foot (it may be secured temporarily by sliding a machine screw through either hole).

Step 2:

Insert all slats into the pockets of the right pocketed side rail. The third slat from the head and the third slat from the foot should have a hole drilled in each end. Secure these slats with 40 mm wood screws. Align the pockets of the left pocketed side rail with the slats and secure the third slat from the head and foot with 40 mm wood screws like you did on the first side. Attach the left pocketed side rail to the headboard assembly and the left foot using two 70 mm machine screws and barrel nuts on each end as in **Step 1**.


After about 60 days, check ALL screws for tightness and tighten as necessary. Check for tightness yearly after that.

Hardware Guide

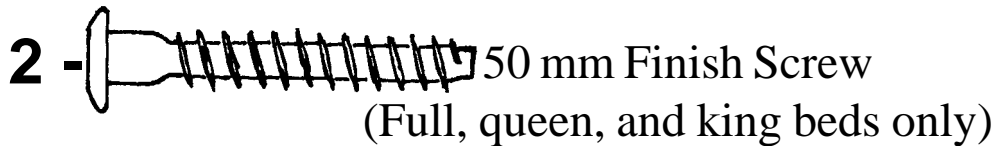

Norka Woodworks
143 W. Market St.
Akron, OH 44303
© 2006 Norka, Inc.

Step 1

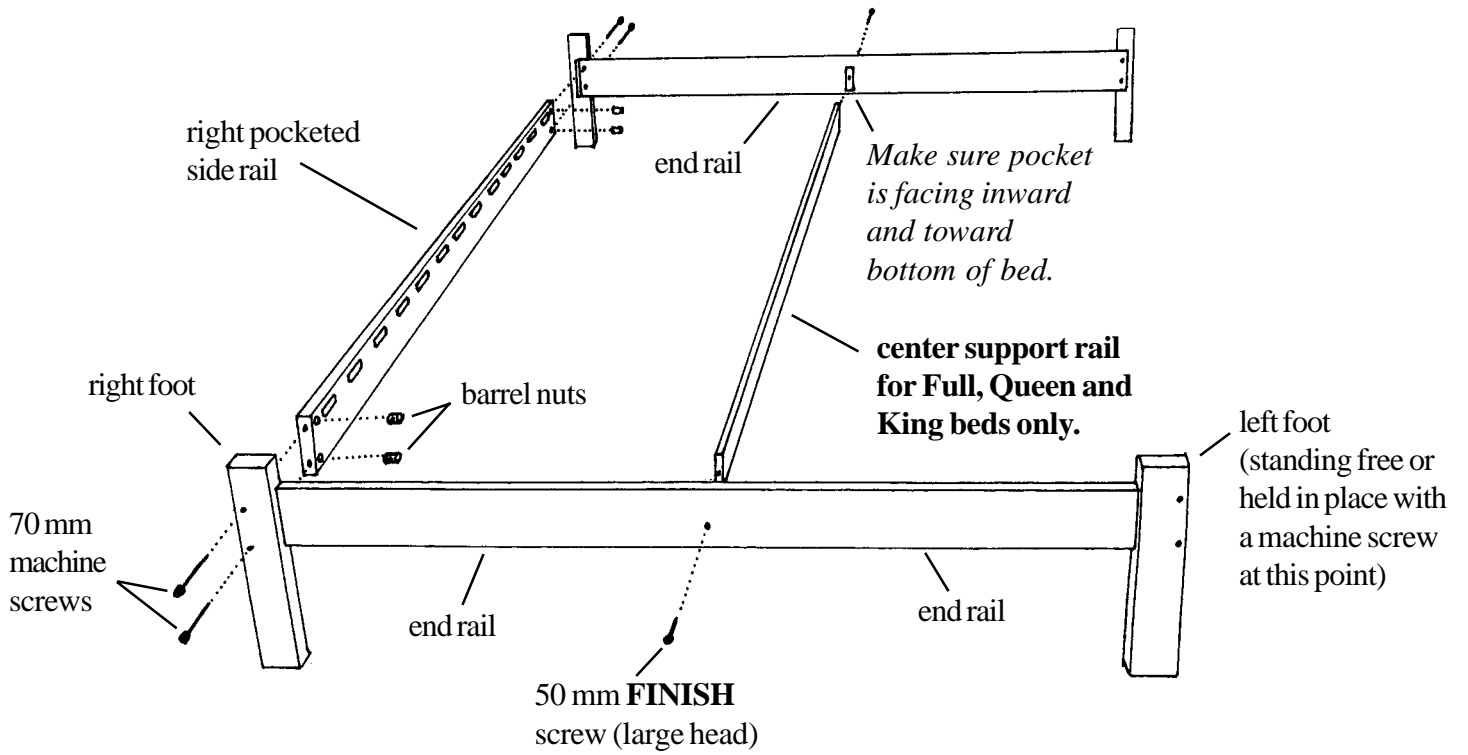

Step 2

